ARAT Telephone mount

Type: Audi A3,
(normal radio, DIN housing)
Model 2003 onwards

Part No: 1302.2

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

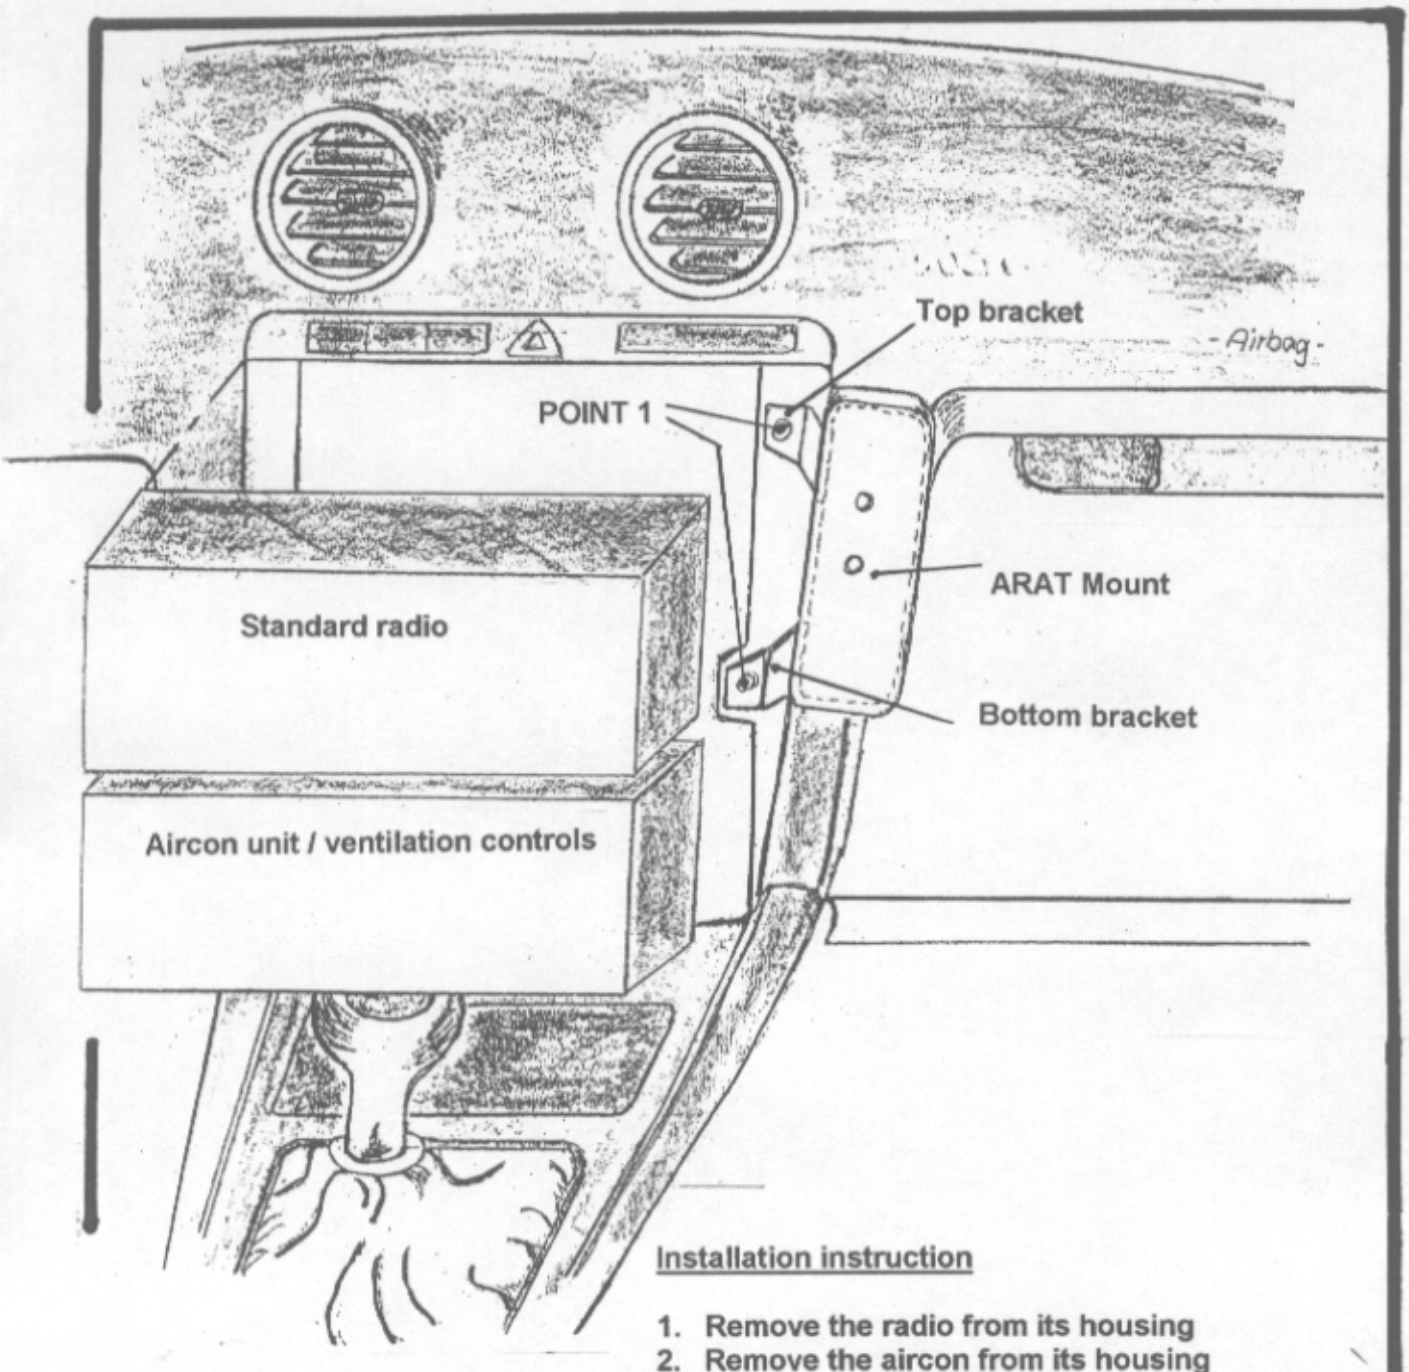


Installation instruction

1. Remove the radio from its housing
2. Remove the aircon from its housing (it sits on locating pages)
3. Remove the screws at POINT 1
4. Place the ARAT mount to the contours of the dashboard, and secure the mount through the top and bottom brackets with the previously removed screws
5. Replace the aircon unit and radio

NOTE: To secure the hands-free-kit holder onto the mount you must pre-drill into the metal plate that lies beneath the complete face of the ARAT mount